


# Locker Replacement Guide


## Step 1

**Double tap home screen to access administration settings, navigate to lockers tab and disable lock**

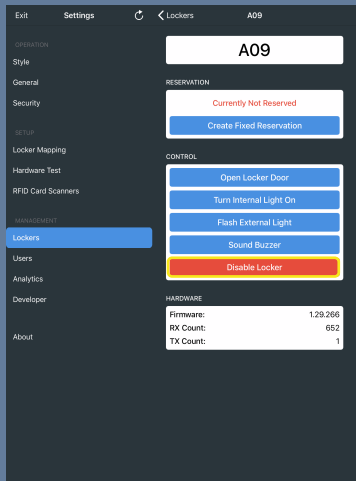


## Step 2

**Navigate to hardware testing tab and select the disabled lock**

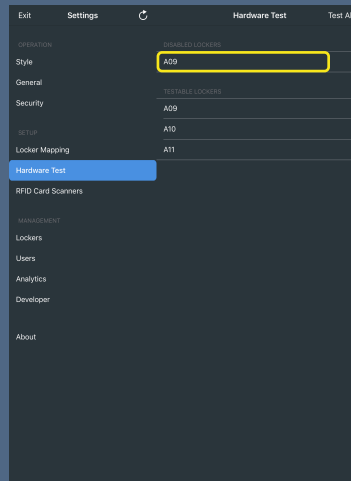

## Step 3

**Select replace unit and leave page open**

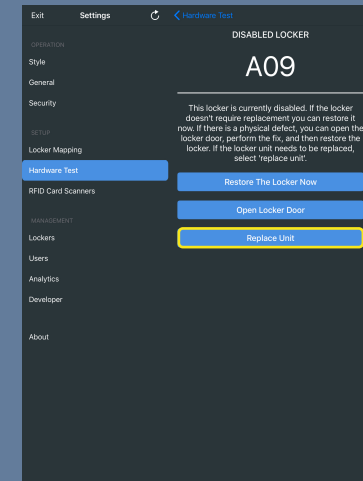

## Step 4

**Unscrew faulty lock and unplug cables. (take note of which cable is at the top and bottom) Plug in new lock and screw in using existing holes**




## Step 5

**Lock will flash green and kiosk will prompt a lock replacement**



## Step 6

**Accept replacement locker prompt on kiosk to complete install**

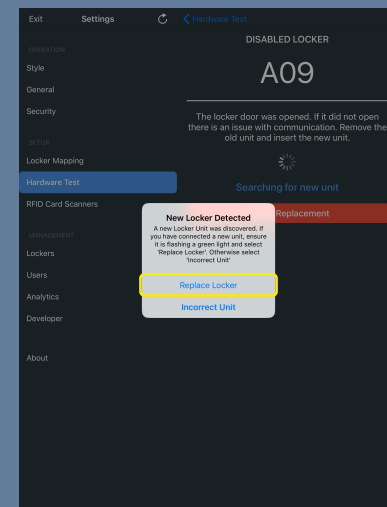

Smartalock