





Screw the floorsense sensor module in to the centre of the desk.

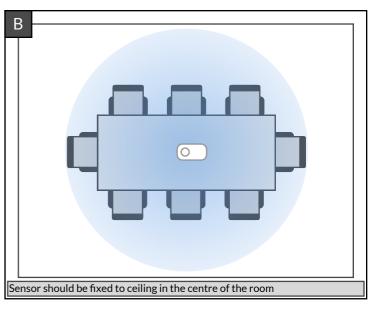

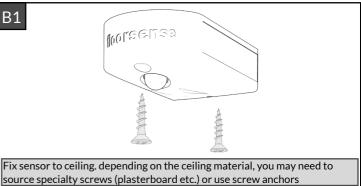

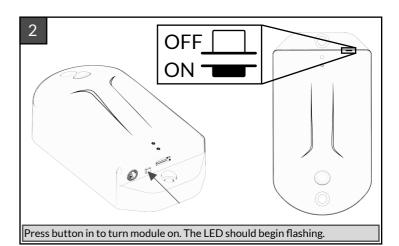

Installation LED Progressions

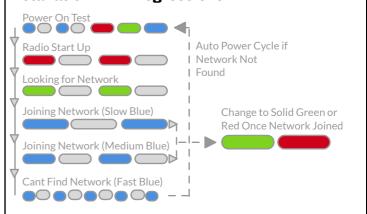

\* For more information head to floorsen.se/contact